

Porsche 991 Carrera C2

Stainless Steel Outer Grille Kit (Without Parking Sensors)

Kit Contents: -

- 1. off LH Upper Grille
- 1. off LH Centre Grille
- 1. off LH Lower Grille
- 1. off RH Upper Grille
- 1. off RH Centre Grille
- 1. off RH Lower Grille
- 6. off No6 x 3/4" Screws




YouTube Tutorial;

<https://www.youtube.com/watch?v=HKEREXuU54E>


Lower Side Mesh Grille Fitting Instructions (Please fit the grilles in this order)

1. Fit masking tape around all of the apertures to protect the paintwork while fitting.
2. Guide the Grille into the aperture making sure the bracket has hooked behind the aperture (Fig 1).
3. Insert the screw into the diamond through mesh and tighten down as shown in fig 2 (do not over tighten).
4. Repeat steps 1, 2 and 3 to the opposite grille.
5. Remove the tape and the grilles are now complete.

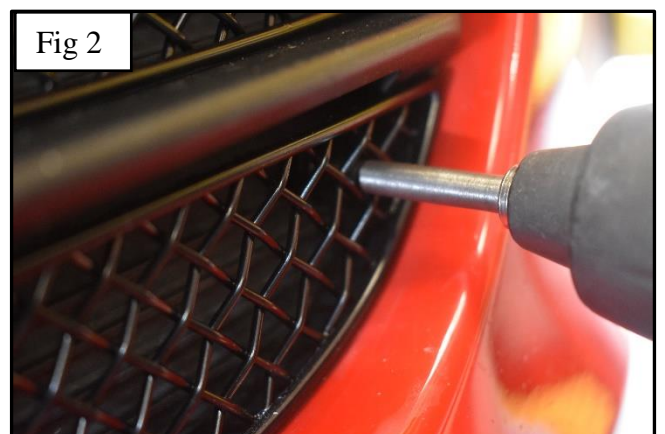

Centre Side Mesh Grille Fitting Instructions

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Guide the Grille into the aperture making sure the bracket has hooked behind the aperture (Fig 1) (You can use a long thin screw driver to make sure it has clipped in position or by putting your hand through the centre aperture and pull the grille into position).
3. Once grille is in correct position insert the screw into the diamond through mesh and tighten down (fig 2) (do not over tighten).
4. Repeat steps 1, 2 and 3 to the opposite grille.
5. The grilles are now complete.

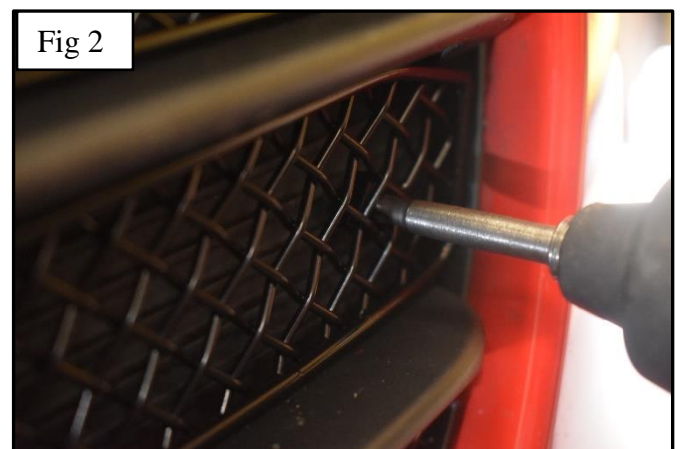

Upper Side Mesh Grille Fitting Instructions

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Guide the Grille into the aperture making sure the bracket has hooked behind the aperture (Fig 1).
3. Once grille is in correct position insert the screw into the diamond through mesh and tighten down (fig 2) (do not over tighten).
4. Repeat steps 1, 2 and 3 to the opposite grille.
5. The grilles are now complete.

