

Porsche 991 C4 Carrera Stainless Steel Sports Side Grille Kit

Kit Contents: -


- 1. off LH Upper Grille
- 1. off LH Centre Grille
- 1. off LH Lower Grille
- 1. off RH Upper Grille
- 1. off RH Centre Grille
- 1. off RH Lower Grille
- 8. off No6 x 3/4" Screws
- 2. off Grip Clips



<https://www.youtube.com/watch?v=LElcwESgJIQ>

Lower Side Mesh Grille Fitting Instructions **(Please fit the grilles in this order)**


1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Firstly, locate the outer part of the grille into the aperture making sure the grille is central in the aperture (fig 1), then Insert the screw into the diamond through mesh and tighten down shown in fig 2 (do not over tighten).
3. Hold the grille in position then push the grip clip onto the bracket and the plastic aperture (fig 3) so that the grille and plastic are held together tightly.
4. Repeat steps 1, 2 and 3 to the opposite grille.
5. The grilles are now complete.

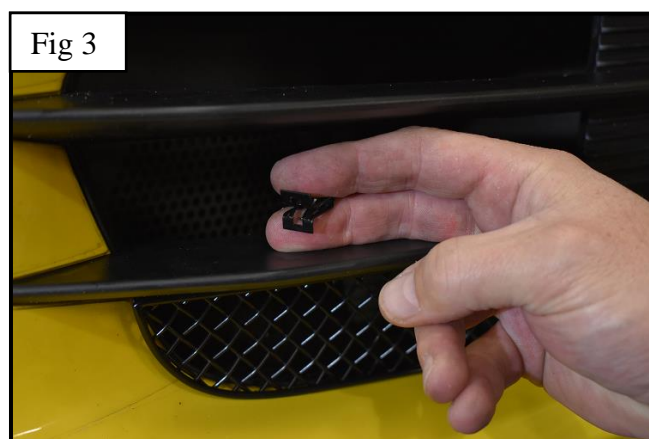

THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.

Centre Side Mesh Grille Fitting Instructions

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Firstly, locate the inner part of the grille into the aperture making sure the bracket has clipped behind the plastic aperture as shown in fig 1. You can check the clip is engaged by using a screwdriver through the mesh as shown in fig 2.
3. Hold the grille in position then then Insert the screw into the diamond through mesh and tighten down shown in fig 3 (do not over tighten).
4. Repeat steps 1, 2 and 3 to the opposite grille.
5. The grilles are now complete.

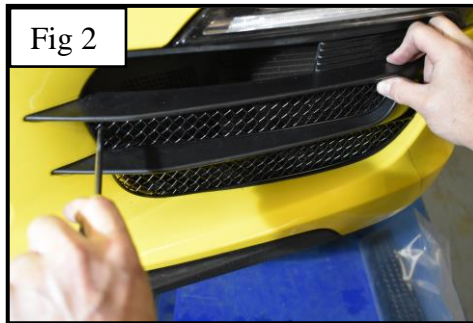

Upper Side Mesh Grille Fitting Instructions

1. Fit masking tape around all off the apertures to protect the paintwork while fitting.
2. Locate Grille Level with aperture (fig 1).
3. Insert the screws into the diamonds through mesh and tighten down as shown in fig 2 & 3 then repeat to the other screw (do not over tighten).
4. Repeat steps 1, 2 and 3 to the opposite grille.
5. Remove the tape and the grilles are now complete.

