

# Porsche 991.2 Carrera S Stainless Steel Sports Grille

## Kit Contents: -

- 1. off Centre Grille
- 2. off No 6 x 1" Screws
- 1. off No 6 x 2 ½" Screws



## YouTube Tutorial:

<https://www.youtube.com/watch?v=1BxbzVKKnBA>



## Centre Mesh Grille Fitting Instructions

1. Remove number plate & plinth if applicable (fig 1).
2. Trim the tabs from the plinth (fig 2)
3. Fit masking tape just around the edges of the apertures to protect the paintwork while fitting.
4. Carefully guide the grille into the aperture (fig 3) and Insert the 1" screw into the diamond through mesh and tighten down as shown in fig 4 then repeat to the other side diamond then Insert the 2 ½" screw into the centre diamond and tighten down (do not over tighten).
5. Remove the tape and the grilles are now complete.



Fig 1



Fig 2

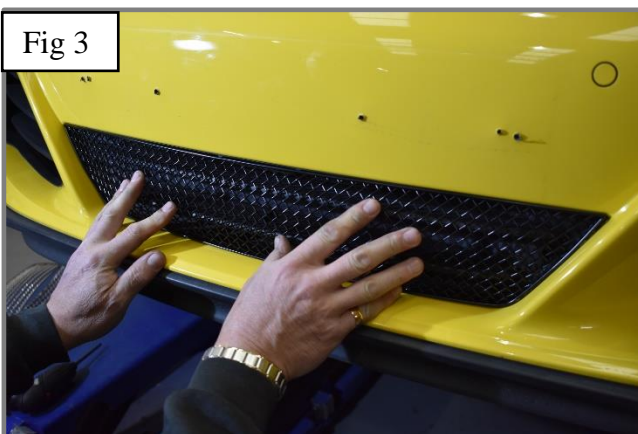


Fig 3

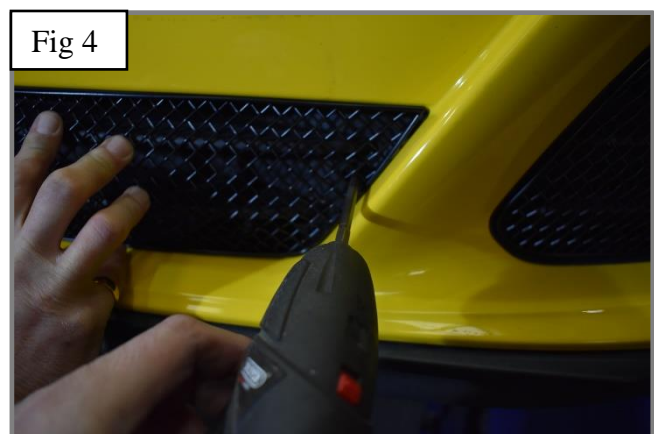


Fig 4

**THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.**