

Porsche Macan Turbo Stainless Steel Sports Outer Grille Set

Kit Contents: -

- 1. off LH Upper Grille
- 1. off LH Centre Grille
- 1. off LH Lower Grille
- 1. off RH Upper Grille
- 1. off RH Centre Grille
- 1. off RH Lower Grille



Centre Side Mesh Grille Fitting Instructions **(Please fit the grilles in this order)**

<https://www.youtube.com/watch?v=RT51FJW2Qbg>

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Firstly, locate the outer part of the grille (Fig 1) making sure the bracket has hooked into the slot as shown in fig 2.
3. Locate the inner bracket making sure it clips behind the aperture. (You can use a long thin screwdriver to make sure it has clipped in position)
4. Repeat steps 1, 2 and 3 to the opposite grille.
5. The grilles are now complete.

Fig 1



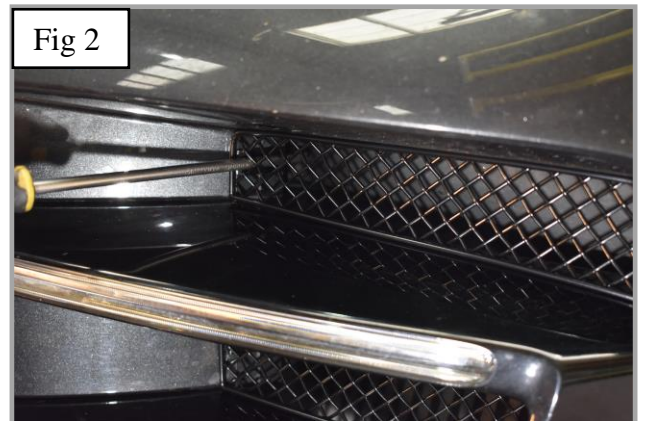
Fig 2



THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.

Upper Side Mesh Grille Fitting Instructions

1. Fit masking tape around all off the apertures to protect the paintwork while fitting.
2. Firstly, locate the outer part of the grille making sure the bracket has hooked behind the aperture as shown in fig 1.
3. Locate the inner bracket making sure it clips behind the aperture fig 2. (You can use a long thin screwdriver to make sure it has clipped in position)
4. Repeat steps 1, 2 and 3 to the opposite grille.
5. Remove the tape and the grilles are now complete.

**Lower Side Mesh Grille Fitting Instructions**

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Firstly, locate the outer part of the grille making sure the bracket has hooked behind the aperture as shown in fig 1.
3. Locate the inner bracket making sure it clips behind the aperture fig 2. (You can use a long thin screwdriver to make sure it has clipped in position)
4. Repeat steps 1, 2 and 3 to the opposite grille.
5. The grilles are now complete.

