


# Porsche 958.2 Cayenne Facelift Stainless Steel Sports Lower Grille

**Kit Contents: -**

1. off Upper Grille

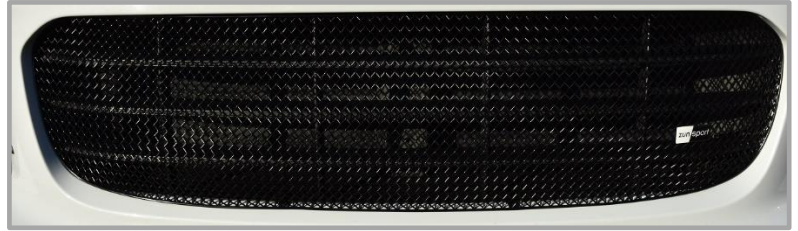

**Upper Mesh Grille Fitting Instructions**

<https://www.youtube.com/watch?v=FICptdCkI1o>

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Guide the grille into the aperture centrally and gently push the grille into position making sure all the brackets clip behind the aperture (fig 1).
3. Using a thin screwdriver through the mesh lever all the brackets so they are tightly into position (fig 2,3 and 4).
4. Remove the tape and the grilles are now complete.

