

Porsche Panamera 970 Facelift Stainless Steel Sports Outer Grille Set

Kit Contents: -

- 1. off LH Upper Grille
- 1. off LH Centre Grille
- 1. off LH Lower Grille
- 1. off RH Upper Grille
- 1. off RH Centre Grille
- 1. off RH Lower Grille
- 6. off No6 x 3/4" Screws



Lower Side Mesh Grille Fitting Instructions **(Please fit the grilles in this order)**

<https://www.youtube.com/watch?v=5PxAGV-Hg5E>


1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Firstly, locate the inner part of the grille (Fig 1) making sure the bracket has clipped behind the aperture.
3. Insert the screw into the diamond through mesh and tighten down as shown in fig 2 (do not over tighten).
4. Use a long thin screwdriver to make sure the bracket has clipped behind aperture Fig 3).
5. Repeat steps 1, 2 and 3 to the opposite grille.
6. The grilles are now complete.



THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.

Centre Side Mesh Grille Fitting Instructions

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Firstly, locate the inner part of the grille (Fig 1) making sure the bracket has clipped behind the aperture.
3. Insert the screw into the diamond through mesh and tighten down as shown in fig 2 (do not over tighten).
4. Use a long thin screwdriver to make sure the bracket has clipped behind aperture Fig 3).
5. Repeat steps 1, 2 and 3 to the opposite grille.
6. The grilles are now complete.

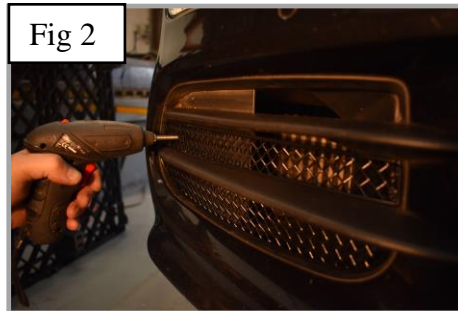

Upper Side Mesh Grille Fitting Instructions

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Firstly, locate the inner part of the grille (Fig 1) making sure the bracket has clipped behind the aperture.
3. Insert the screw into the diamond through mesh and tighten down as shown in fig 2 (do not over tighten).
4. Use a long thin screwdriver to make sure the bracket has clipped behind aperture Fig 3).
5. Repeat steps 1, 2 and 3 to the opposite grille.
6. The grilles are now complete.

