

Porsche Panamera 970 Facelift Stainless Steel Sports Centre Grille

Kit Contents: -

- 1. off Centre Grille
- 1. off M4 x 30mm Cap Screw
- 1. off 407 Clip
- 3. off 2" Screws
- 2. off 2 ¼" Screws





YouTube Tutorial:

<https://www.youtube.com/watch?v=gmT3-3bJoaY>

Centre Mesh Grille Fitting Instructions



1. Fit masking tape just around the edges of the apertures to protect the paintwork while fitting.
2. Carefully guide the into the aperture making sure it is centralized (fig 1).
3. Once the grille is centrally in position insert the screw (2") into the centre diamond through the mesh and tighten down as shown in fig 2 (do not over tighten).
4. Insert the 2 ¼" screws through the upper mesh diamonds and tighten down as shown in fig 3 (do not over tighten).
5. Insert the remaining 2" screws through the lower mesh diamonds and tighten down as shown in fig 4 (do not over tighten).
6. Using an Allen key through the mesh you can now secure the bracket to the existing plastic slat as shown in fig 5. (You can use a screwdriver through the mesh to help hold the bracket in place whilst you are tightening the bracket).
7. Remove the tape and the grilles are now complete.

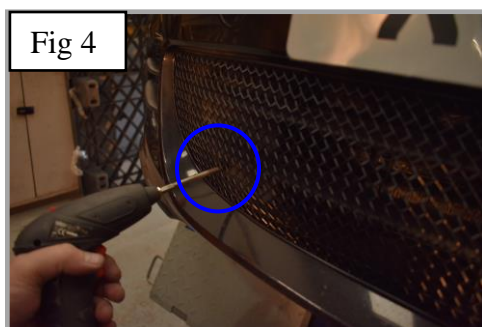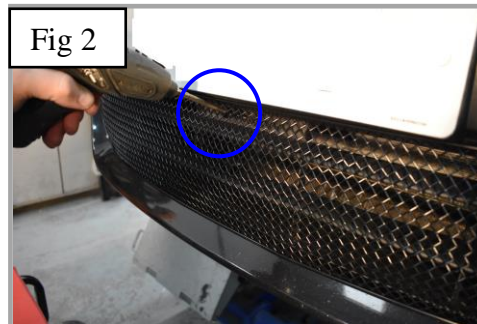

THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.