

Porsche Panamera 971 Stainless Steel Sports Centre Grille

Kit Contents: -

1. off Centre Grille




[YouTube Tutorial](#)

<https://www.youtube.com/watch?v=rglJytBGxlc>



Centre Mesh Grille Fitting Instructions

1. Fit masking tape just around the edges of the apertures to protect the paintwork while fitting.
2. Guide the grille into the aperture centrally and gently push the grille into position making sure all the brackets clip behind the aperture (fig 1).
3. Using a thin screwdriver through the mesh lever all the brackets so they are tightly into position (fig 2 and 3).
4. Remove the tape and the grilles are now complete

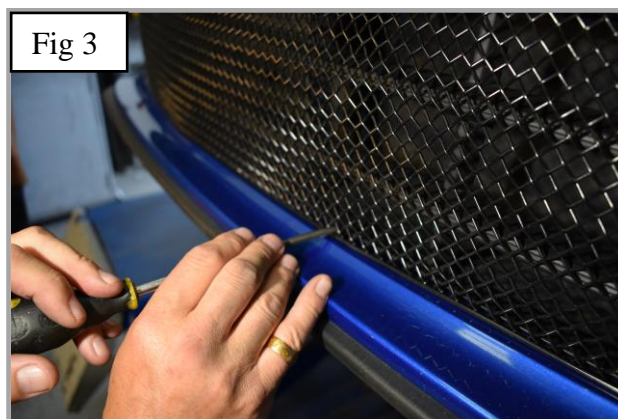

THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.