

## Porsche Macan GTS Stainless Steel Sports Outer Grille Set

### Kit Contents: -

- 1. off LH Upper Grille
- 1. off LH Centre Grille
- 1. off LH Lower Grille
- 1. off RH Upper Grille
- 1. off RH Centre Grille
- 1. off RH Lower Grille
- 4. off Grip Clips





### Lower Side Mesh Grille Fitting Instructions **(Please fit the grilles in this order)**

#### YouTube Video Link –

<https://www.youtube.com/watch?v=F2BVOoNJp0U>


1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Fit a piece of masking tape roughly whereas shown in fig 1.
3. Firstly, locate the grille into the aperture as shown in fig 2, then mark the masking tape so it aligns the centre of the bracket which is on the grille.
4. Remove the grille then push the grip clip onto the aperture as shown in fig 3 & 4.
5. Carefully guide the grille back into the aperture making sure that the hook bracket is located behind the aperture and the other bracket has been pushed into the grip clip (holding grip clip in place whilst pushing grille in aperture fig 5). To ensure the grille is securely in place put your hand through the centre aperture (fig 6) and push centre of grille outwards whilst pushing inner of grille inwards **(the bracket must clip over both the plastic and the bracket as shown)**.
6. Repeat steps 1 - 4 to the opposite grille.
7. The grilles are now complete.

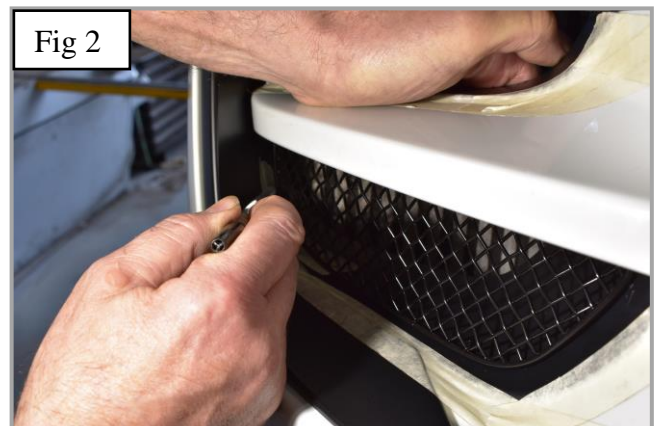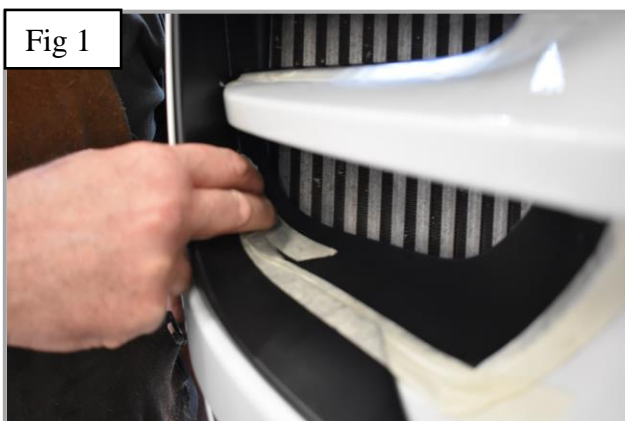



**Centre Side Mesh Grille Fitting Instructions**

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Attach the grip clip onto the aperture as close to the centre of the opening as you can as shown in fig 1.
3. Carefully guide the grille into the aperture Outer side 1st making sure that the grip clip bracket pushes and snaps into the grip clip. Once grip clip has clipped in position carefully guide opposite side on grille into position ensuring hook bracket clips behind aperture, **(use a thin screwdriver through the mesh lever the bracket so they are tightly into position)** (fig 5).
4. Repeat steps 1 - 4 to the opposite grille.
5. The grilles are now complete.

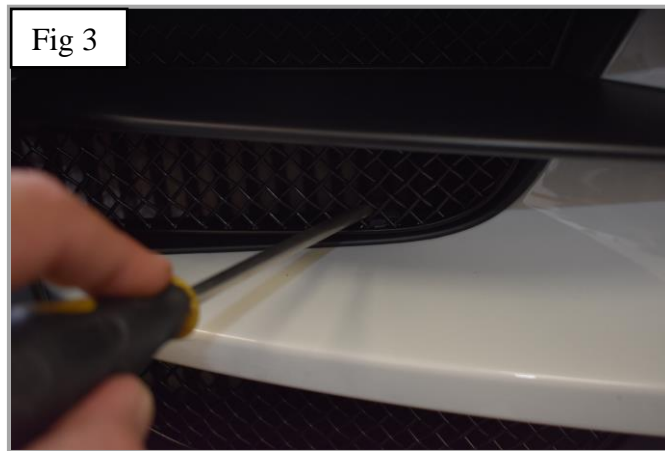

**Upper Side Mesh Grille Fitting Instructions**

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Offer the grille to aperture and guide the outer bracket behind the aperture then carefully push the grille so that the opposite bracket locates behind the aperture (fig 1).
3. Using a thin screwdriver through the mesh lever all the brackets so they are tightly into position (fig 2).
4. Remove the tape and the grilles are now complete.

