ZUN Sport Part No's. ZPR95119 / ZPR95119B 1 of 3

Issue 1 Nov 2022

Porsche Macan S Outer Stainless Steel Sports Grille Set

Kit Contents: -

- 1. off R/H Upper Outer Grille
- 1. off R/H Centre Outer Grille
- R/H Lower Outer Grille 1. off
- 1. off L/H Upper Outer Grille
- 1. off L/H Centre Outer Grille L/H Lower Outer Grille 1. off
- 4. off Grip Clips




YouTube Tutorial: https://www.youtube.com/watch?v=wHqbrWDZ-5U

PLEASE FIT GRILLES FOLLOWING THIS ORDER:

Middle Outer Mesh Grille Fitting Instructions

- 1. Fit masking tape just around the edges of the apertures to protect the paintwork while fitting.
- 2. Carefully guide the middle outer grille into the aperture making sure it is centralized in the aperture, ensure grille is not pushed in too far and the brackets have clipped behind the aperture (fig 1).
- 3. When grille is in position push the grip clip onto the central bracket (fig 2 & 3).
- 4. You can use a long thin screwdriver to make sure the outer clip is engaged properly (fig 4).
- 5. Remove the tape and the grilles are now complete.

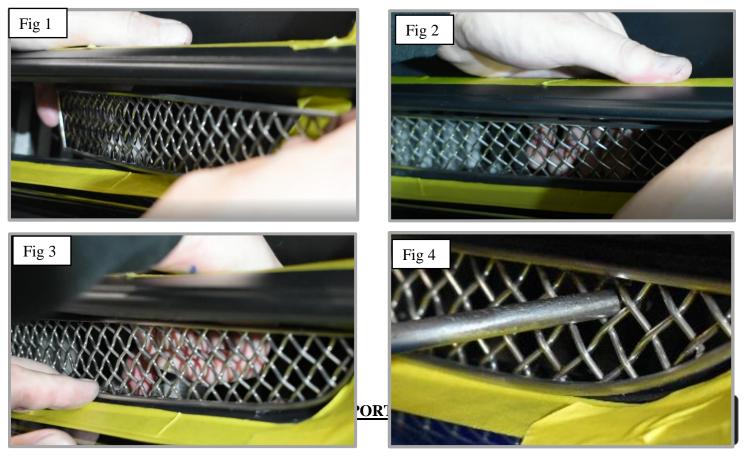





Issue 1 Nov 2022

Lower Outer Mesh Grille Fitting Instructions

- 1. Fit masking tape just around the edges of the apertures to protect the paintwork while fitting.
- 2. Carefully guide the grille into the aperture making sure it is centralized in the aperture, ensure grille is not pushed in too far (fig 1) and the brackets have clipped behind the aperture (fig 2).
- 3. You can use a long thin screwdriver to make sure they are clipped in position (fig 3).
- 4. Remove the tape and the grilles are now complete.

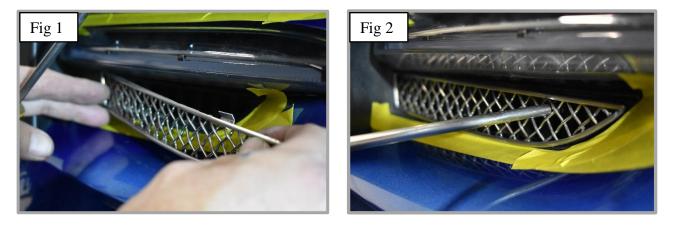

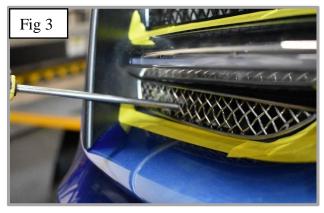

THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.






Upper Outer Mesh Grille Fitting Instructions

- 1. Fit masking tape just around the edges of the apertures to protect the paintwork while fitting.
- 2. Place grille in aperture and mark up a line where the bracket is sitting (fig 1).
- 3. Remove grille from aperture and push grip clip on to the marked line (fig 2)
- 4. Guide the grille into the aperture making sure it is centralized in the aperture, ensure grille is not pushed in too far and the grip clip has engaged with the bracket (fig 3).
- 5. Push on grille and engage outer clip behind aperture using a long screwdriver through the mesh (fig 4).
- 6. Remove the tape and the grilles are now complete (fig 5).





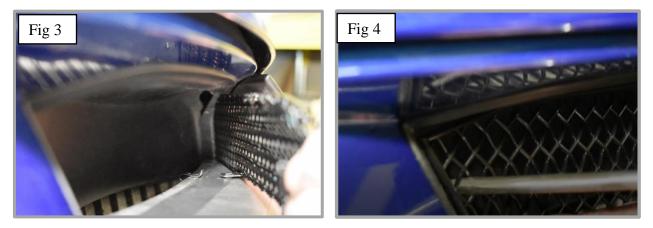



THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.

