


Porsche Boxster Spyder 987.2 PDK Centre Stainless Steel Sports Grille Fitting Instructions

Kit Contents: -

1. off Centre Grille

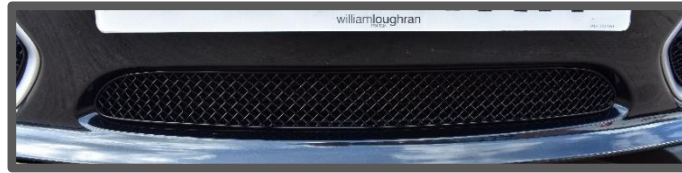

SCAN ME

YouTube Tutorial; <https://www.youtube.com/watch?v=2eY-bBRtfNY>

Outer Mesh Grille Fitting Instructions

1. Fit masking tape just around the edges of the apertures to protect the paintwork while fitting.
2. Carefully guide the grille into the aperture making sure the grille is central in the aperture (fig 1).
3. Using a screwdriver as shown in fig 2 & 3 push the right-hand side clip down making sure it locates behind the aperture & grille is secure.
4. Remove the tape and the grilles are now complete.

