

Porsche Boxster Spyder 987.2 PDK

Outer Stainless Steel Sports Grille Set

Fitting Instructions

Kit Contents: -



- 1. off L/H Outer Grille
- 1. off R/H Outer Grille

[YouTube Tutorial;](#)



Outer Mesh Grille Fitting Instructions - <https://www.youtube.com/watch?v=GQ4MIIhJcIk>

1. Fit masking tape just around the edges of the apertures to protect the paintwork while fitting.
2. **STARTING WITH LEFT SIDE GRILLE.** Carefully guide the left-hand side of the grille into the aperture making sure the clip on the left of the grille hooks behind the aperture (fig 1).
3. Using a screwdriver as shown in fig 2 push the right-hand side clip down making sure it locates behind the aperture & grille is secure.
- Repeat this process with the right-hand side grille, guiding the right-hand side in first and securing this clip first.**
4. Remove the tape and the grilles are now complete.

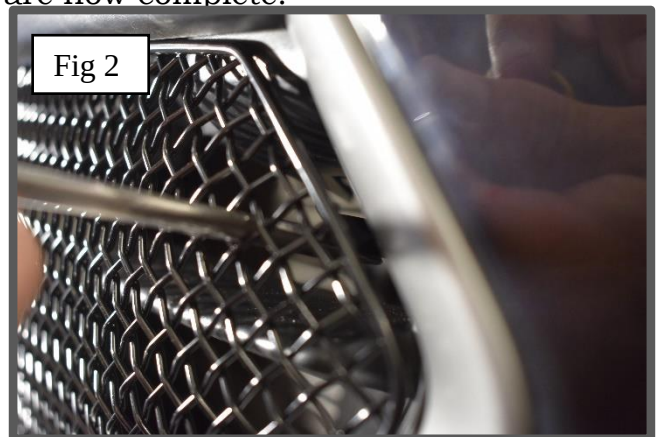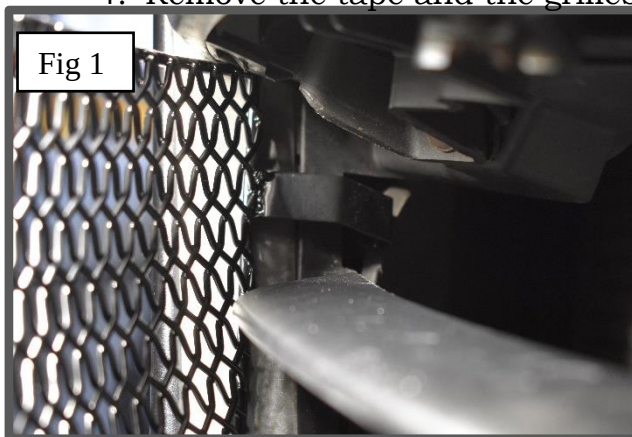

THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.