

RENAULT TRAFIC VAN MY 07-10

Stainless Steel Upper Sports Grille

Kit Contents: -

- 1 off LH Grille
- 1 off RH Grille
- 4 off No.6 x 3/4" Screws



Tools Required: -

- Masking Tape
- Phillips Screwdriver

Mesh Grille Fitting Instructions

1. It is advised that masking tape is used to protect original trim whilst fitting. Position tape so that it can easily be removed after fitting.
2. Open the bonnet and secure.
3. Centralise the grilles to the apertures, locate the 2 bottom clips behind original plastic grille, Fig 1.
4. Push the top of the mesh grille forward ensuring that it is contacting the original plastic grille, Fig 2.
5. Secure in position with the screws provided, Fig 3.
Do not over tighten.
6. Remove the masking tape and assembly is complete.

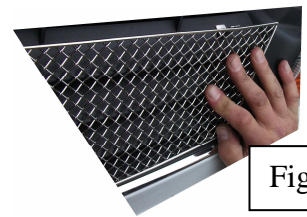


Fig 1

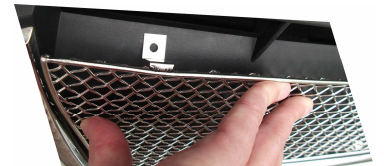


Fig 2



Fig 3