

# SUBARU IMPREZA 2010 STI Stainless Steel Upper Mesh Grille

**(For Ease Of Fitment Removal Of Front Bumper Highly Recommended)**

**Kit Contents: -**

- 1. off Mesh Grille
- 2. off Round Spring Clips

**Tools: -**

- Short PS2 Screwdriver
- Flat Head Screwdriver
- Masking Tape







**Bumper Removal**

1. Open Bonnet
2. Disconnect the ground cable from the battery
3. Remove the 4 front upper clips from the bumper. (*fig.1*)
4. Remove the headlight washer cover
5. Turn over the front mud guards and remove the clips connecting the fender and the bumper (*fig.2*)
6. Remove the clips at the lower side of the bumper (*fig.3*)
7. Disconnect the fog light connectors. (Models with fog lights only)
8. Detach the flange sections of the bumper side from the guide brackets (A).

**(fig.4) CAUTION: Do not force when pulling, this can damage the bumper flanges.**  
**Note: Detach them from the fender side in the order from 1 to 3, while pulling the bumper upwards in direction of arrow B.**

9. You can now remove the bumper from the Vehicle.

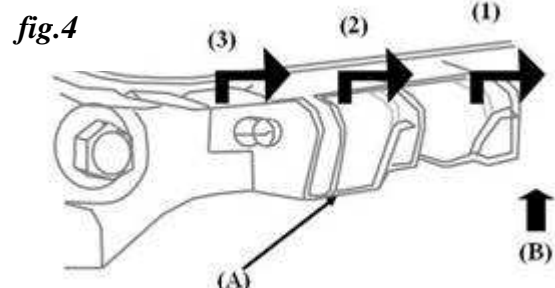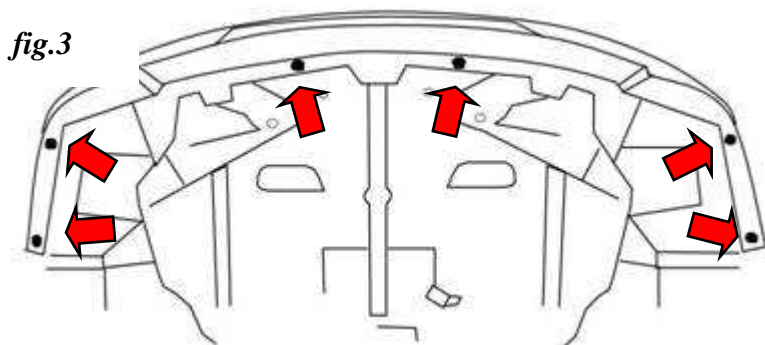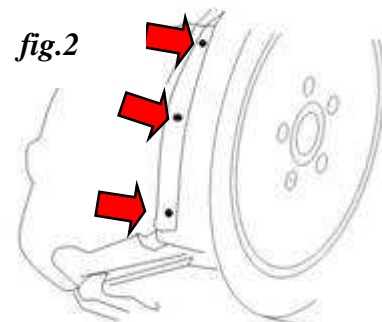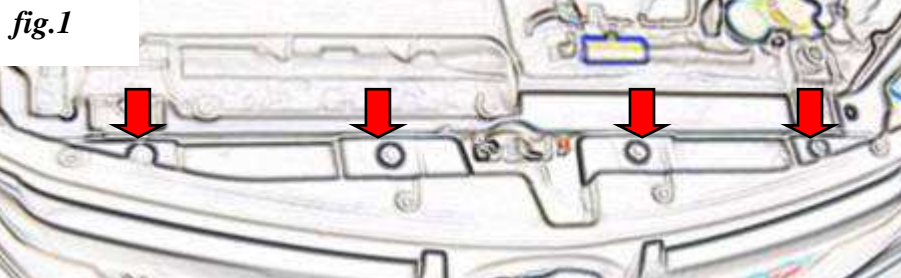

**Mesh Grille Fitting Instructions**

1. Remove the 4 screws from the back of the grille.
2. Now that the screws are out unclip the side fixings and the lower grille fixings will pull out at the bottom with a little effort.
3. Unscrew the inner moulding from the upper plastic grille assembly.
4. Remove the existing metal mesh. (If you want to refit the existing Sti badge, carefully remove the spring clips for the back, be careful not to damage the pegs as you will need them for refitting)
5. Locate the new mesh centrally in the inner moulding from the back of the grille, hooking it inside the two tabs at the top.
6. Trial fit the part into the upper grille so that you can get the correct position for the Sti badge and check the line up of the mesh.
7. Refit the Sti Badge using the new fixings supplied.
8. Re-assemble the upper grille with the new mesh.
9. Push the grille assembly back into the bumper until the plastic clips click into position.
10. Re-fit the 4 screws into the back of the grille being careful not to drop them.
11. Replace the bumper.
12. Your grille is complete.

**Remove****Mesh Under Clips**