

Subaru WRX – STI VA MY2021

Stainless Steel Sports Bonnet Scoop Grille


Kit Contents: -

- 1. off Scoop Grille
- 1. off Small Scrivet



Scoop Removal Instructions

1. Firstly, remove bolt caps as shown in Fig 1 & 2
2. Firstly, unscrew the screws holding the grille in position Fig 1 & 2.
3. Remove scoop from bonnet Fig 4.

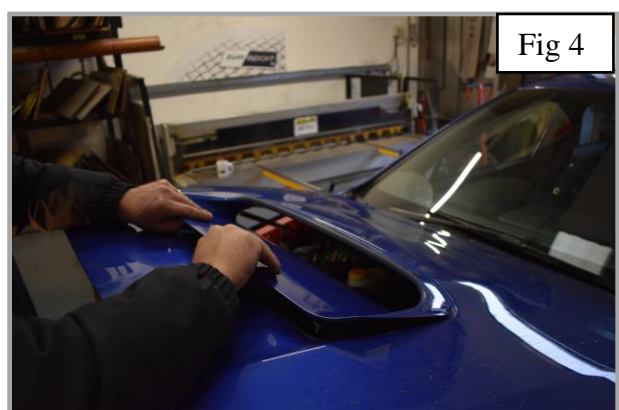

Scoop Mesh Grille Fitting Instructions

<https://www.youtube.com/watch?v=uajGdizy1Yo>



1. Guide the grille into the aperture (fig 5).
2. Mark hole position through bracket (fig 6 & 7).
3. Remove grille and drill 4.5mm hole in marked position (fig 8).
4. Guide the grille back into the aperture and insert scrivet through mesh diamond (fig 8) to secure scrivet use a pair of pliers to push the tail of the scrivet inside the body of the scrivet.
5. With the grill now in place you can re-attach the scoop and enjoy your New bonnet scoop grill.
6. The grilles are now complete.

