

# Part No's. ZTY72615

Page 1 of 2 Iss 1 Dec 2018

# <u>Toyota Hilux (AN120-AN130)</u> <u>Upper Grille Set</u>

#### Kit Contents: -

- 1. off LH Upper Grille
- 1. off LH Centre Grille
- 1. off LH Lower Grille
- 1. off RH Upper Grille
- 1. off RH Centre Grille
- 1. off RH Lower Grille
- 4. off No6 x <sup>3</sup>/<sub>4</sub>" Screws
- 4. off No6 x 1" Screws




## Lower Side Mesh Grille Fitting Instructions (Please fit the grilles in this order)

- 1. Fit masking tape around the apertures to protect the paintwork while fitting.
- 2. Firstly locate the grille into the aperture as shown in fig 1.
- 3. Check that bracket is secure. (You can use a long thin screw driver to make sure it has clipped in position as shown in fig 2).
- 4. Use the  $\frac{3}{4}$ " Screw provided to secure the grille in place as shown in fig 3.
- 5. Repeat steps 1 4 to the opposite grille.
- 6. The grilles are now complete.





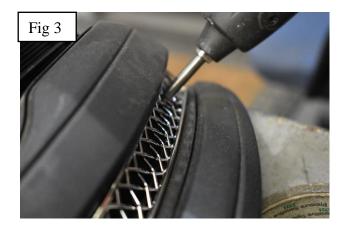

THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.






Part No's. ZTY72615

#### **Centre Side Mesh Grille Fitting Instructions**


- 1. Fit masking tape around the apertures to protect the paintwork while fitting.
- 2. Locate the grille into the aperture as shown in fig 1.
- 3. Secure the grille in place using a long, thin screwdriver as shown in Fig 2.
- 4. Use the  $\frac{3}{4}$ " screw provided to secure the grille as shown in Fig 3.
- 5. Repeat steps 1-4 to the opposite grille.
- 6. The grilles are now complete.

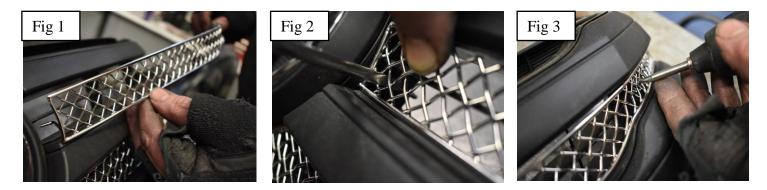

## **Upper Side Mesh Grille Fitting Instructions**

- 1. Fit masking tape around all of the apertures to protect the paintwork while fitting.
- 2. Locate Grille Level with aperture as shown in fig 1.
- 3. Insert the 1" screw provided into the diamond through mesh and tighten down as shown in fig 2 then repeat to the other screw (do not over tighten).
- 4. Repeat steps1, 2 and 3 to the opposite grille.
- 5. Remove the tape and the grilles are now complete.



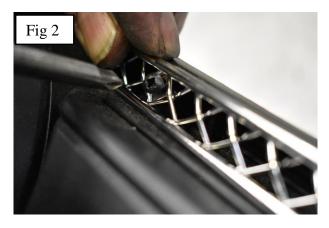



THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.