

# VW T4 Van Long Nose Stainless Steel Sports Lower Grille Kit


**Kit Contents: -**

- 1. off Centre Grille
- 4. off Screws 1 ½"



**Centre Mesh Grille Fitting Instructions**

1. Protect Aperture with masking tape 5mm away from the back edge of the moulding where the grille will fit
2. Offer the Mesh Grilles over the existing plastic grille, then drill a small 2mm pilot hole through the 4 U shaped diamonds and screw in position using the screws provided through the mesh and the U shaped diamond washers into existing grille. (Do not over tighten as this will strip the plastic thread formed by the self tapping screw)
3. Remove the masking tape
4. The grille is now complete.

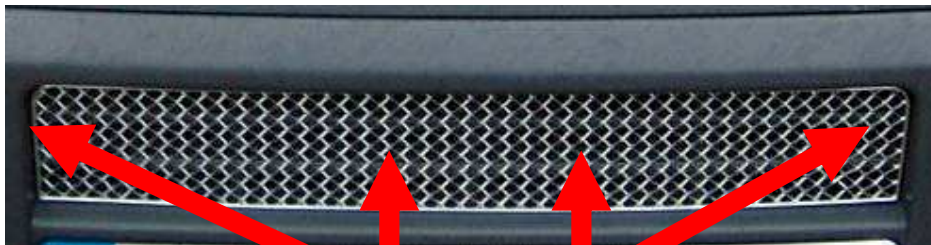

Screw 4 places through U Washer