

VW Amarok

Stainless Steel Lower Sports Grille

Kit Contents: -


- 1. off Centre Grille
- 2. off No6 x ¾" Screws
- 4. off No6 x 1 ½" Screws

**YouTube Tutorial:**

<https://www.youtube.com/watch?v=7GiEnGvJqD4>

Lower Mesh Grille Fitting Instructions

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Offer the grille to aperture and gently push the grille into position making sure all the brackets clip behind the aperture (fig 1).
3. Using a thin screwdriver through the mesh lever all the brackets so they are tightly into position (fig 2).
4. Fasten grille to existing aperture using the screws provided (fig 3).
5. Remove the tape and the grilles are now complete.

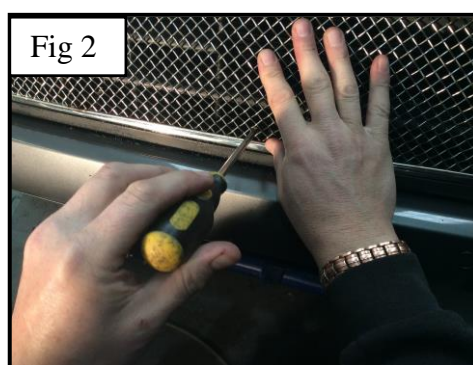

THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT