

Vivaro Van MY 2007-2010 Stainless Steel Upper Sports Grille Kit

Kit Contents: -

- 1 off LH Grille
- 1 off RH Grille



Tools Required: -

- Masking tape
- Thin flat screwdriver

Mesh Grille Fitting Instructions

1. It is advised that masking tape is used to protect the original surfaces prior to assembly, position the tape to allow for easy removal after the grille has been fitted.
2. Offer the grille to the aperture, locating the bottom clips first, push up against the original plastic to secure the 4 clips behind the original trim, Fig 1.
3. Ensure that all of the clips have engaged, if required use a long screwdriver to secure whilst putting a little pressure on the front face of the grille, Fig 2.
4. Remove the masking tape and assembly is complete.



Fig 1

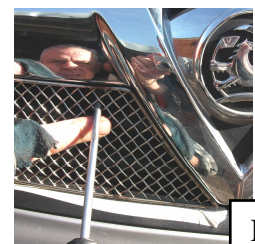


Fig 2