

Vivaro Van MY 2007-2010 Stainless Steel Lower Sports Grille

Kit Contents: -

1 off Lower Grille

Tools Required: -

Masking tape
Thin flat screwdriver



Mesh Grille Fitting Instructions

1. It is advised that masking tape is used to protect the original surfaces prior to assembly, position the tape to allow for easy removal after the grille has been fitted.
2. Offer the grille to the aperture, locating the top 2 bottom clips first, push up against the original plastic and secure all the clips behind the original trim, Fig 1.
3. Ensure that the clips have engaged, if required use a long screwdriver to secure whilst putting a little pressure on the front face of the grille, Fig 2.
4. Remove the masking tape and assembly is complete.



Fig 1

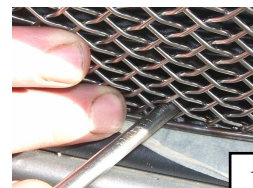


Fig 2