

Vauxhall Vivaro MY16

Stainless Steel Lower Sports Grille

Kit Contents: -

- 1 off Lower Grille
- 6 off No 6 x 3/4" Screws

Tools Required: -


- Masking Tape
- Thin Flat Screwdriver
- Screwdriver



Centre Mesh Grille Fitting Instructions

https://www.youtube.com/watch?v=HXV_nhPTnjI

1. It is advised that masking tape is used to protect the original trim whilst fitting. Position the tape so that it can easily be removed after fitting.
2. Offer the grille centrally to the aperture and gently push the grille into position making sure all the brackets clip behind the aperture (fig 1).
3. Using a thin screwdriver through the mesh lever all the brackets so they are tightly into position (fig 2).
4. Make sure the grille is central in the aperture then insert the screw into the diamond through mesh and tighten down as shown in fig 3 (do not over tighten).
5. Remove the tape and the grilles are now complete.

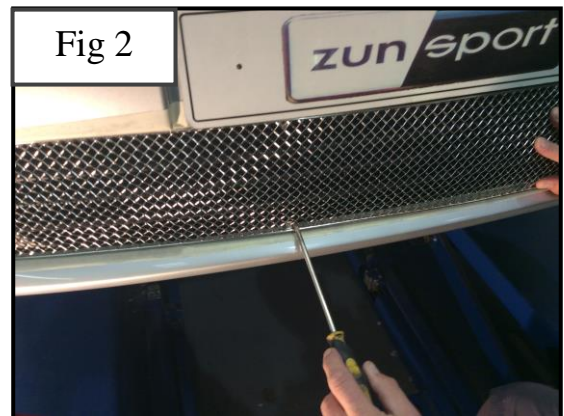

THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.